

Hunter[®]




Light Kit Installation Manual




- To reduce the risk of electrical shock and fire, install this light kit only on Hunter suspended ceiling fans.
- To avoid possible electrical shock, before installing light fixtures, disconnect power by turning off the circuit breakers both to the outlet box and to its associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
- Connect house wiring to the fan before attaching the light fixture to the fan.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, you should use a qualified electrician. Professional installation is recommended.
- Suitable for outdoor use at 40° C.

1

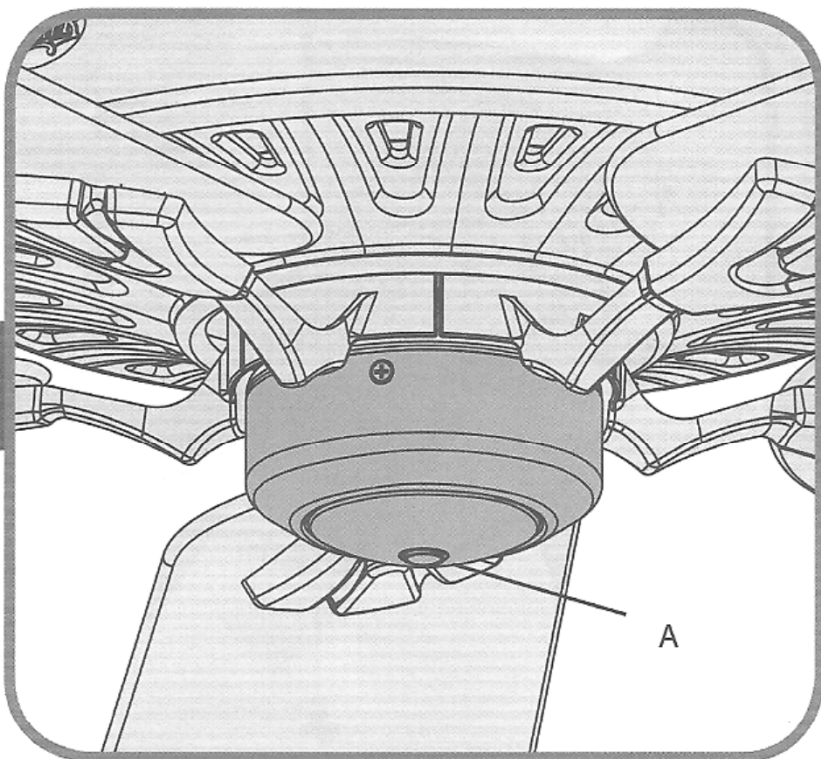


If your fan's switch housing cap has a plug button (A), go to step 3 on page 4.

2

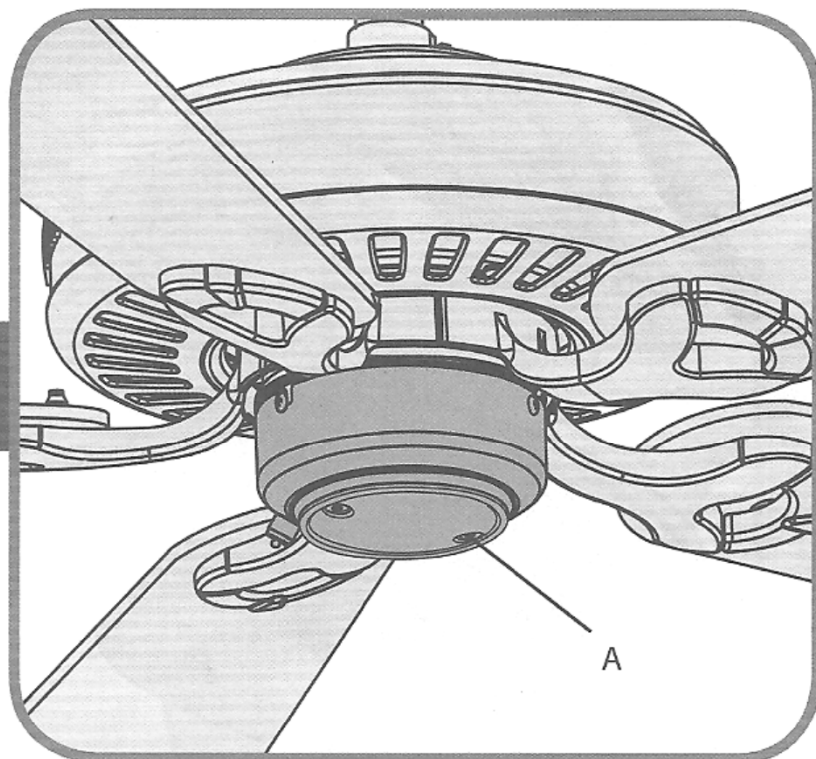


If your fan's switch housing cap has two visible screws (A), go to step 6 on page 5.

English

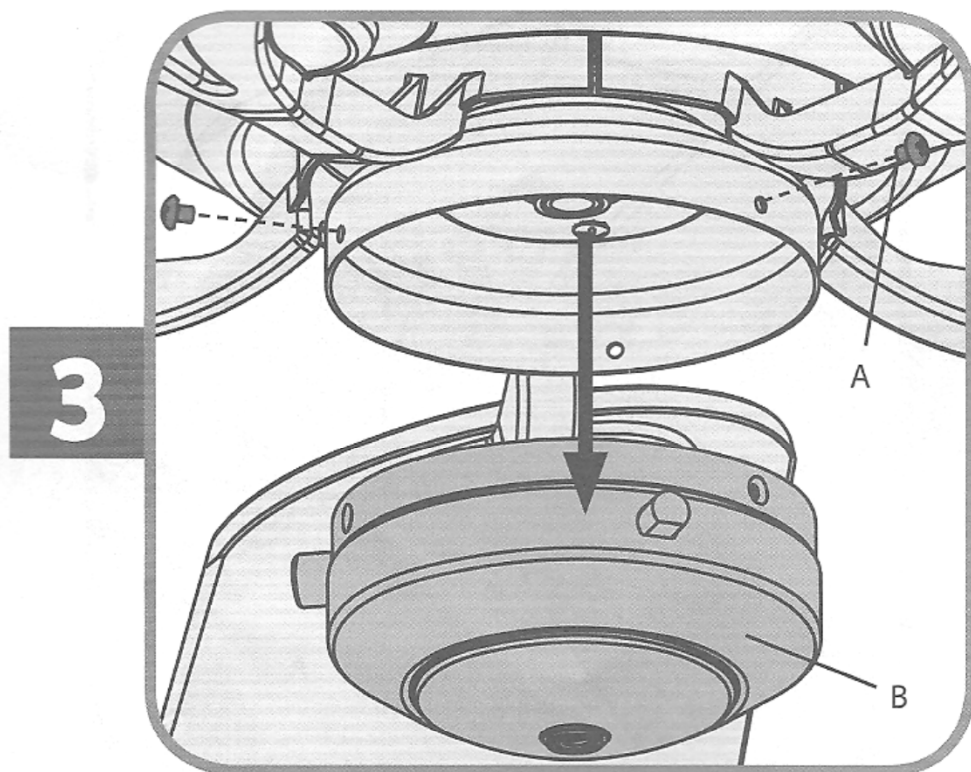

3

Remove the 3 switch housing screws (A). **SAVE THE SCREWS.** Lower the switch housing (B).

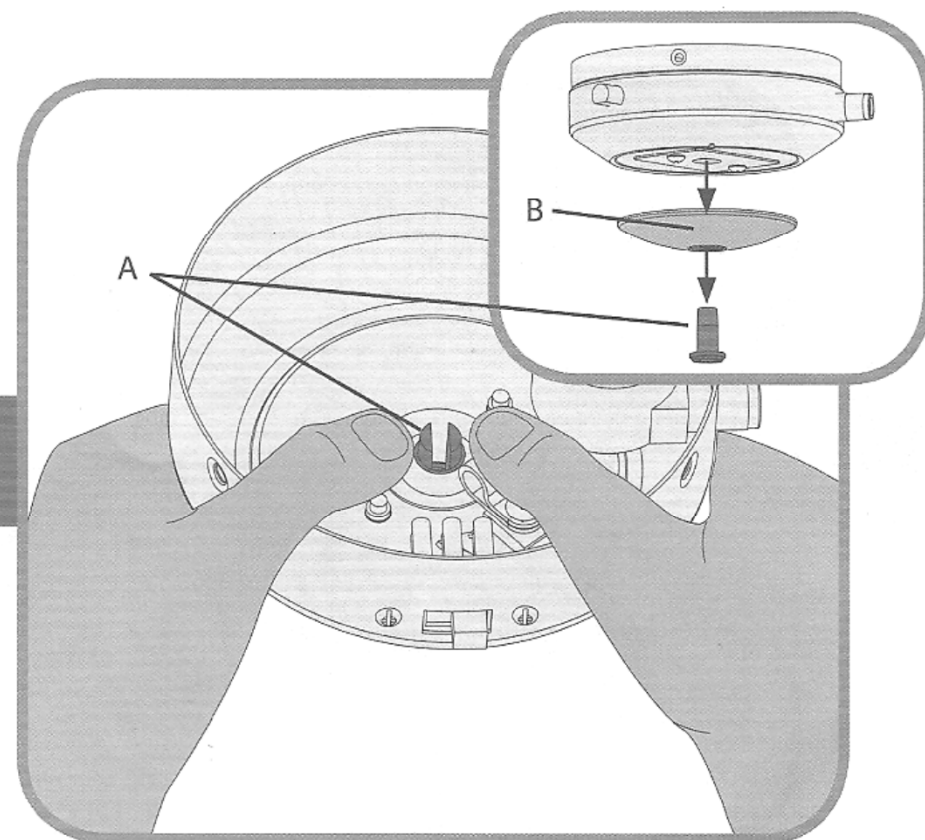


4

Push the plug button (A) and switch housing cap (B) out of the bottom of the switch housing.


English

5

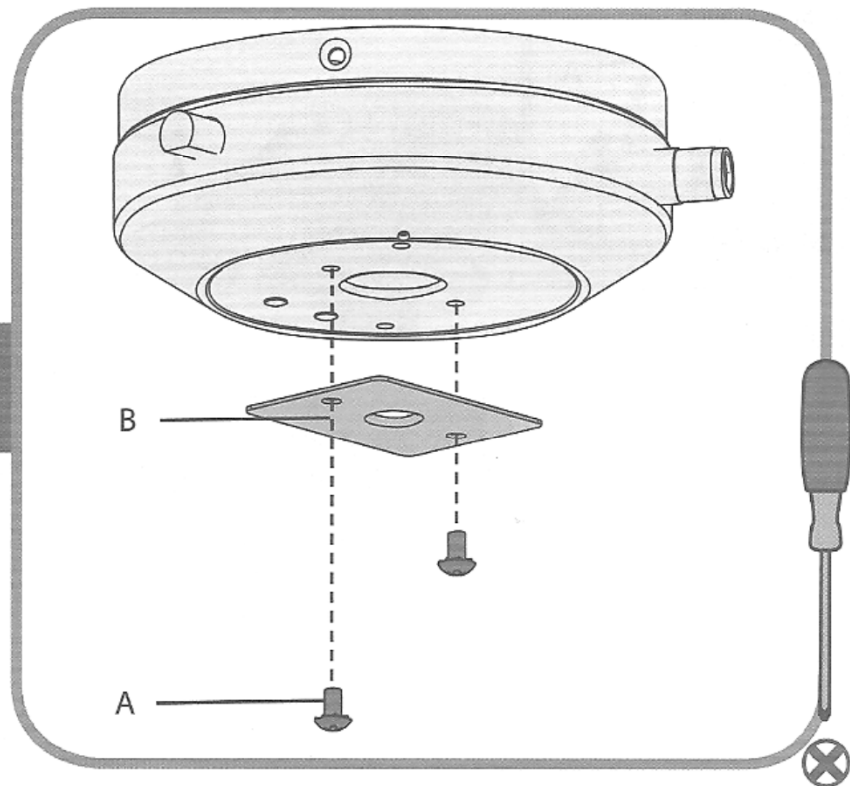

If present, remove the plate screws (A) and the plate (B). Go to step 8 on page 6.


6

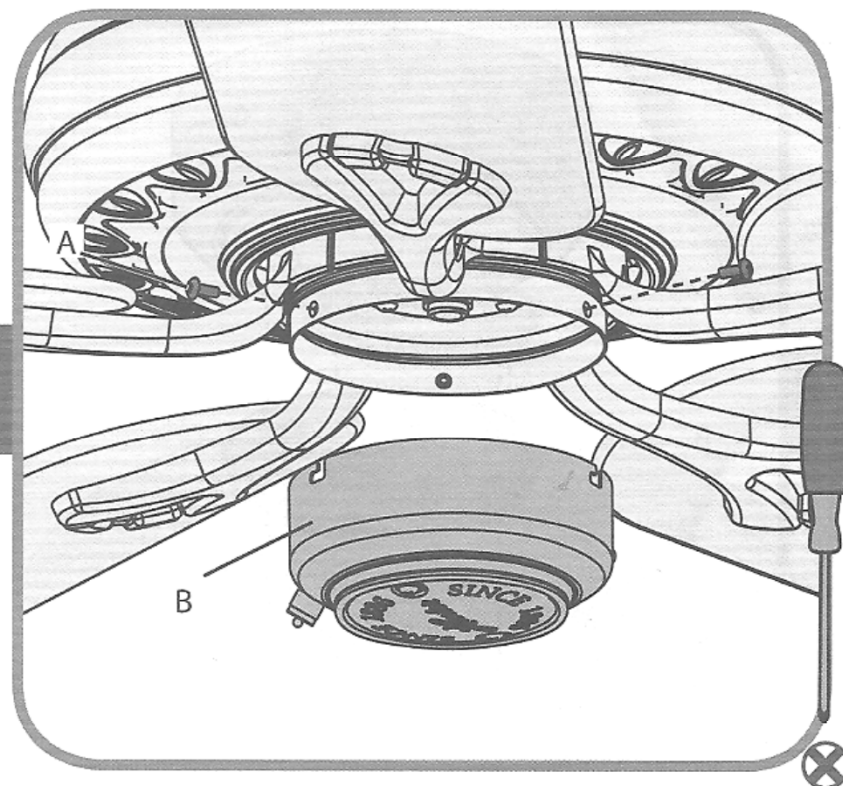

Remove the 3 switch housing screws (A). **SAVE THE SCREWS.** Lower the switch housing (B).


English

7

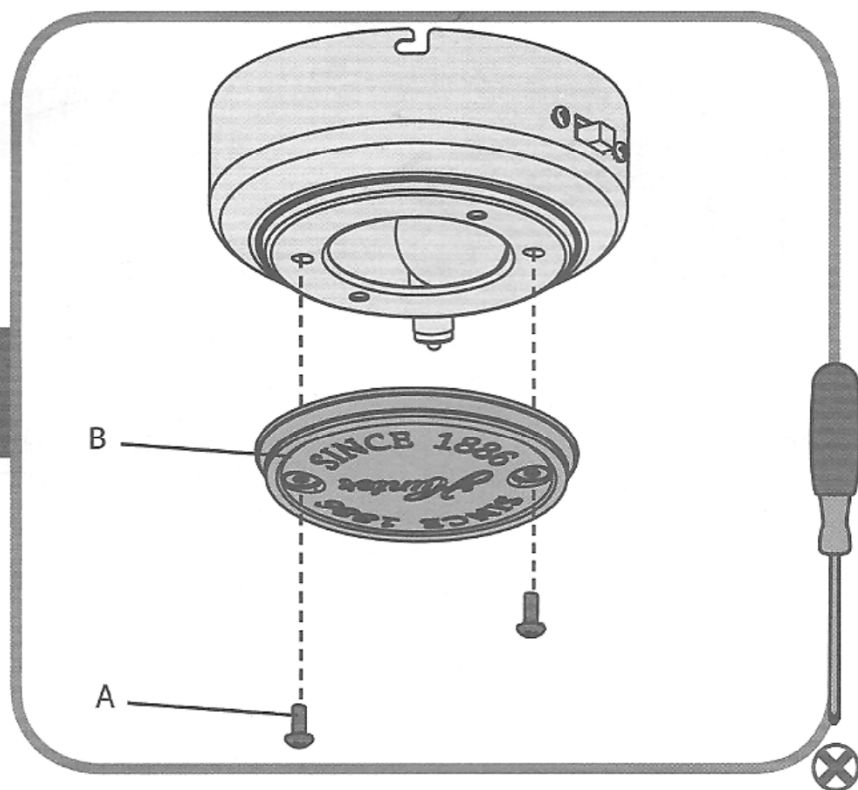

Remove the switch housing screws (A) and the switch housing cap (B).


8

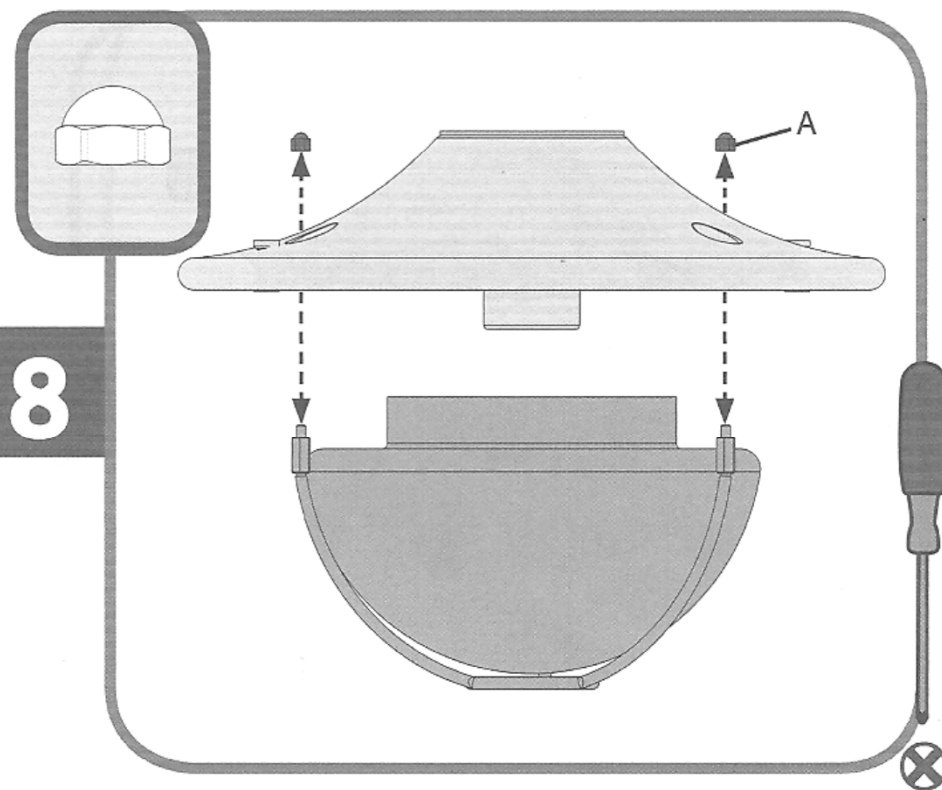

Unscrew the three acorn nuts (A) by hand and carefully detach the globe assembly from the shroud. **KEEP THE ACORN NUTS.**


English

9

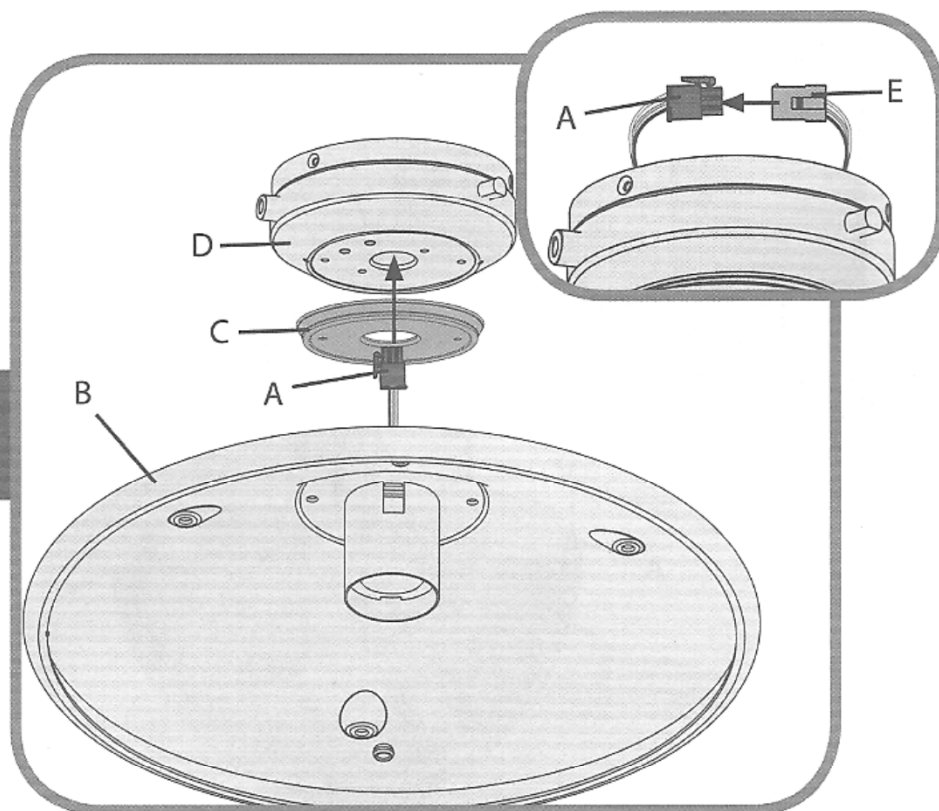

Thread the plug connector (A) from the light kit (B) through the adapter (C) and through the bottom of the lower switch housing (D). Connect the plug from the light kit (A) to the plug from the switch housing (E).


10

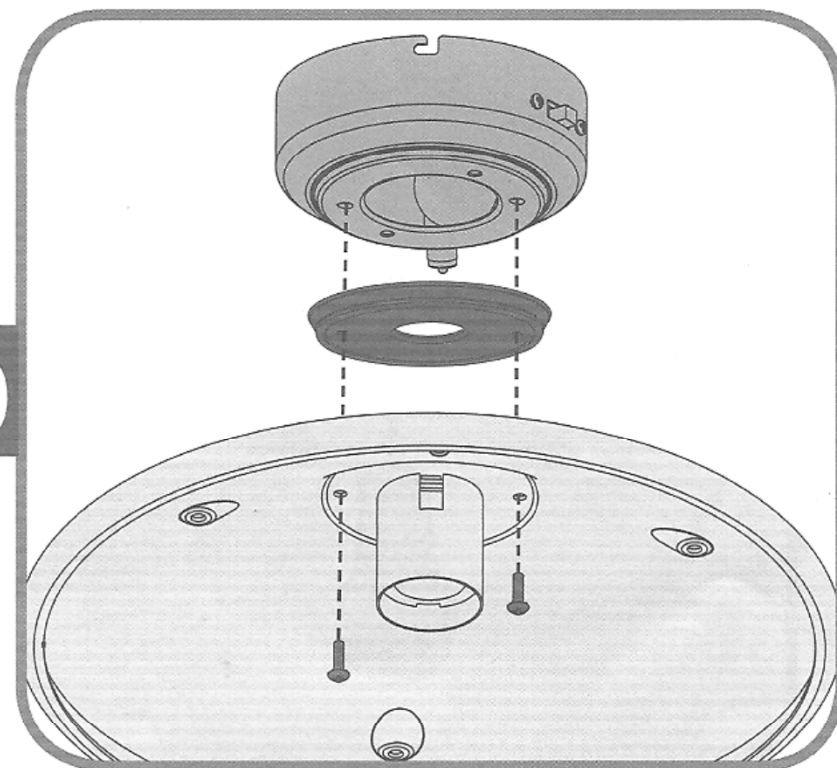

Install the light kit screws through the light kit and adapter and into the lower switch housing. Securely tighten both screws.


English

11

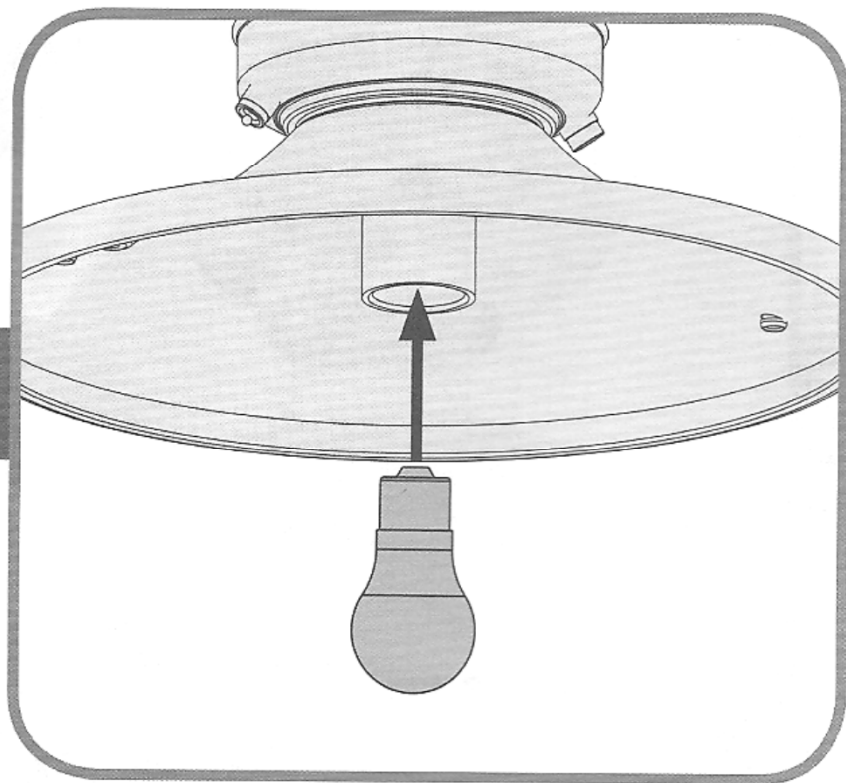

Install a bulb (A) into each of the sockets. When necessary, replace with bulbs of same wattage.


12

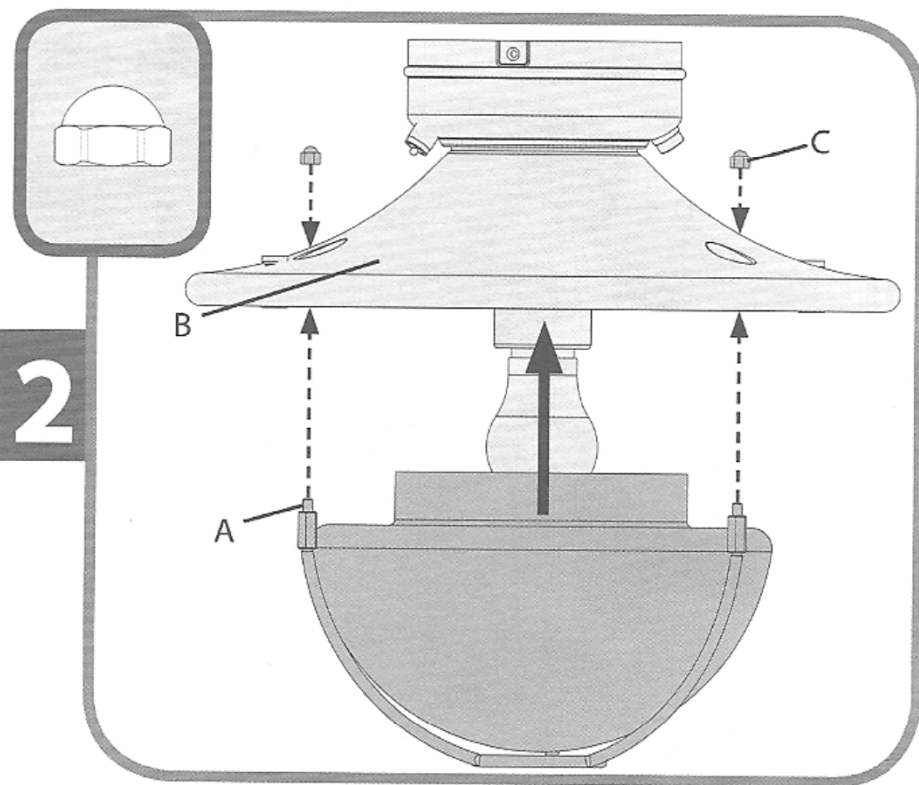

To reinstall the globe assembly, align the posts (A) on the globe assembly with the holes in the shroud (B). Make sure that the chain holes in the globe assembly also line up with the chain holes in the shroud. Lift the globe and posts until the threaded end of the posts are visible through the shroud. Install the three acorn nuts (C) onto the posts so that the light kit is secured to the shroud.


English

13

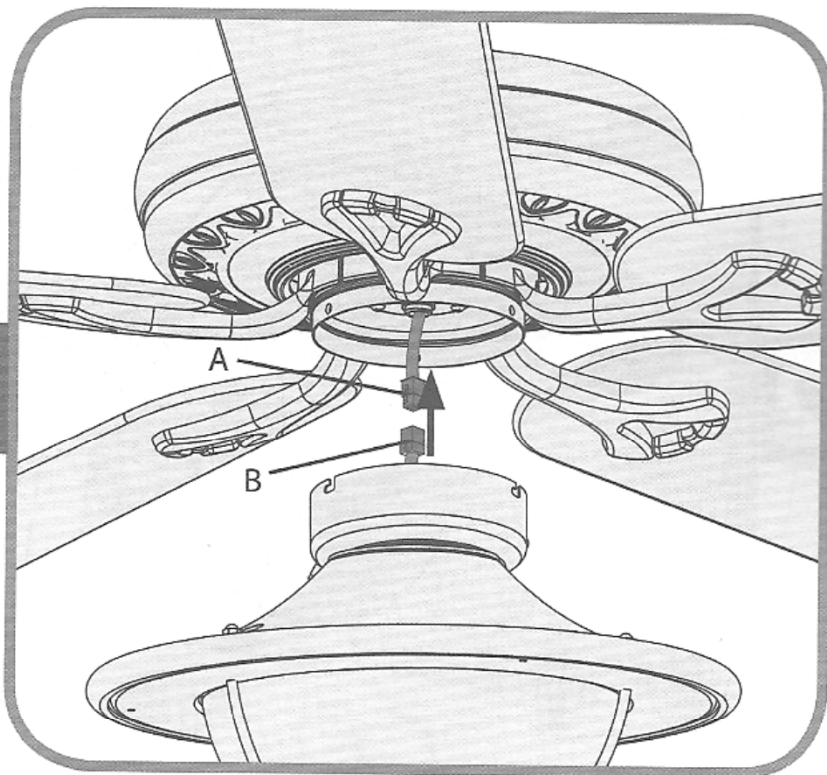


Connect the plug from the upper switch housing (A) to the plug from the lower switch housing (B).

14

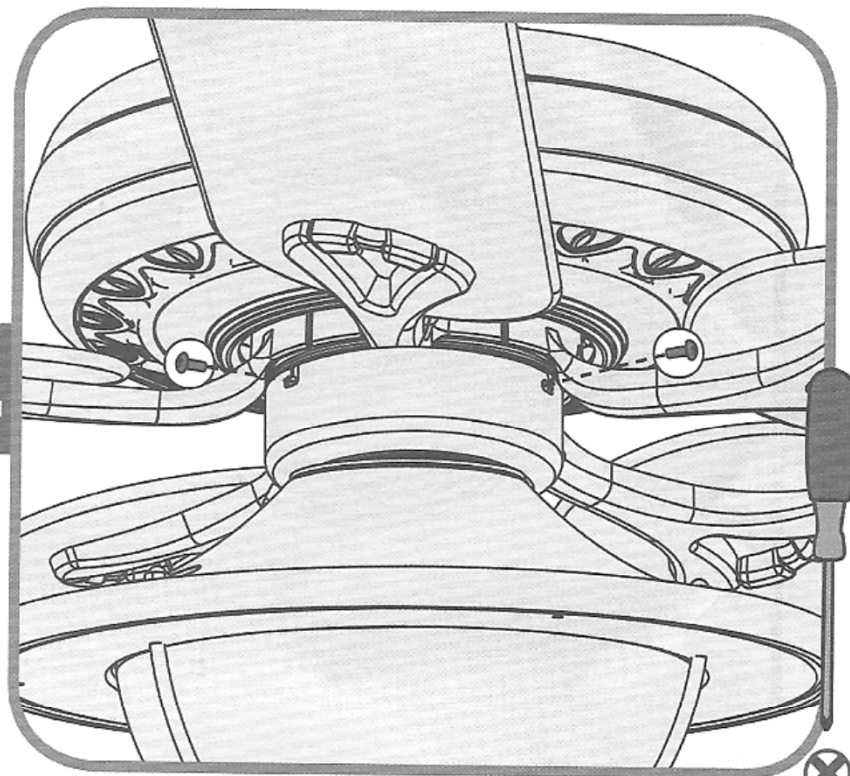


Lift the lower switch housing until its screw holes are aligned with the screw holes in the upper switch housing. Install the 3 switch housing screws you saved. Tighten all three screws.

English

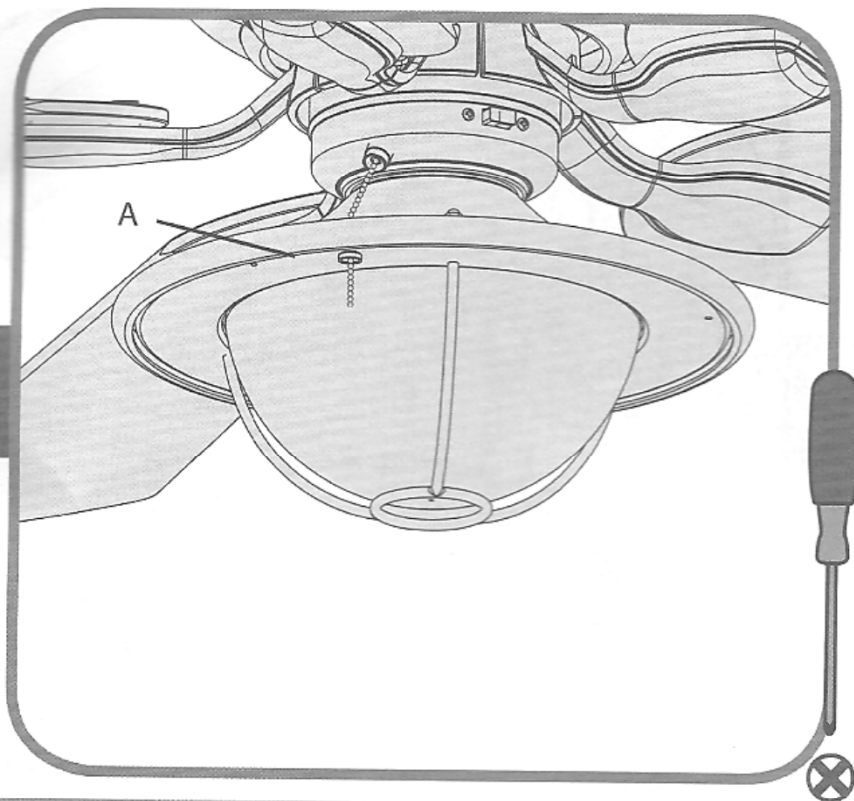
11

Feed the chains from the fan and the light switch down through the holes in the shroud (A).

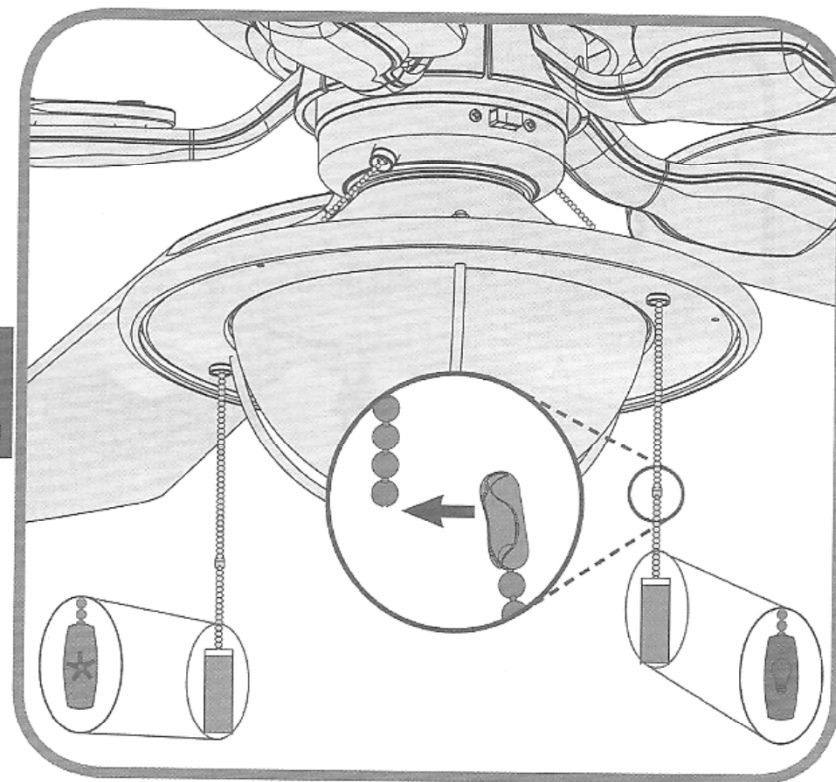12

Connect the appropriate pull chain pendant to each of the short chains. The fan pull chain (B) controls the speed: from high to off. The light pull (A) chain controls the light fixture: on and off.

English

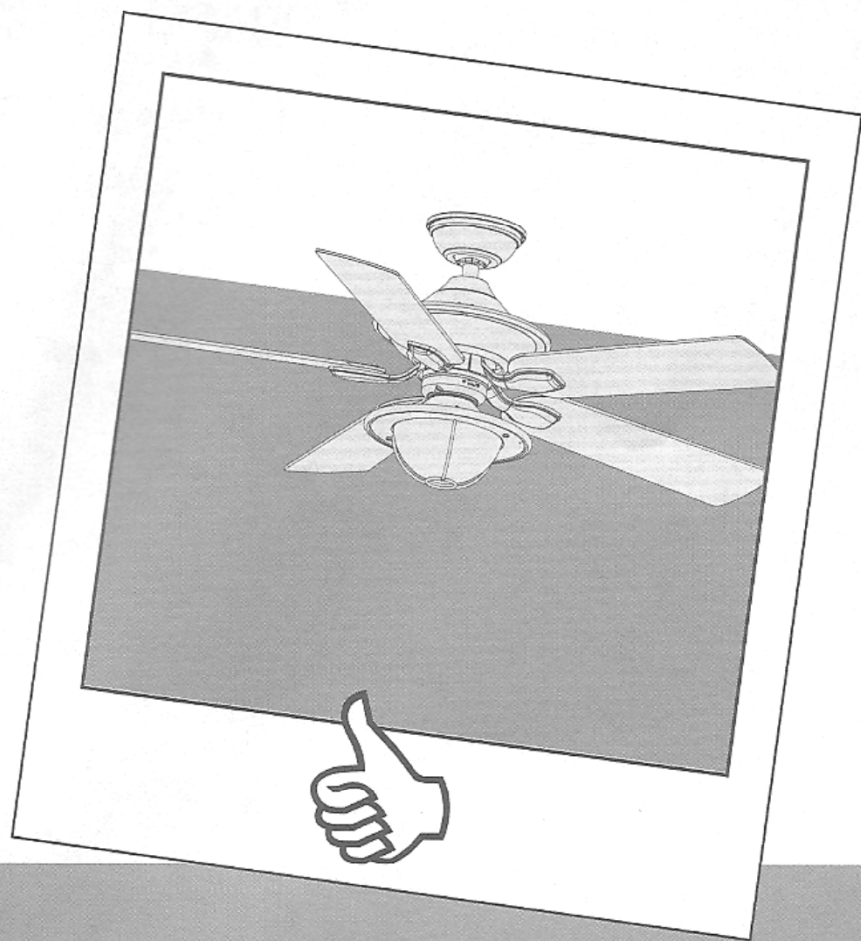

English

Hunter
SINCE 1886